


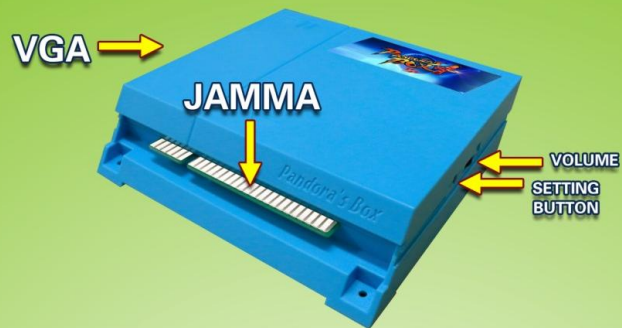

**USER MANUAL**  
**ENJOY LIFE WITH QUALITY**

# 1.JAMMA Interface Definition Picture 1

2PTABLE(Solder Side)		1PTABLE(Parts Side)	
GROUND	A	1	GROUND
GROUND	B	2	GROUND
+5V	C	3	+5V
+5V	D	4	+5V
N/C	E	5	N/C
+12V	F	6	+12V
N/C	H	7	N/C
N/C	J	8	N/C
N/C	K	9	N/C
SPEAKE-	L	10	SPEAKE+
N/C	M	11	N/C
VIDEO GREEN	N	12	VIDEO RED
VIDEO SYNC	P	13	VIDEO BLUE
N/C	R	14	GROUND
N/C	S	15	N/C
COIN SWITCH #2	T	16	COIN SWITCH #1
2P START	U	17	1P START
2P UP	V	18	1P UP
2P DOWN	W	19	1P DOWN
2P LEFT	X	20	1P LEFT
2P RIGHT	Y	21	1P RIGHT
2P BUTTON #1	Z	22	1P BUTTON #1
2P BUTTON #2	a	23	1P BUTTON #2
2P BUTTON #3	b	24	1P BUTTON #3
2P BUTTON #4	c	25	1P BUTTON #4
2P BUTTON #5	d	26	1P BUTTON #5
2P BUTTON #6	e	27	1P BUTTON #6
GROUND	f	28	GROUND




Picture 2

## 2.System Setting

Press the setup button to into the system setup menu(Picture 2) (Picture 3):



Picture 3

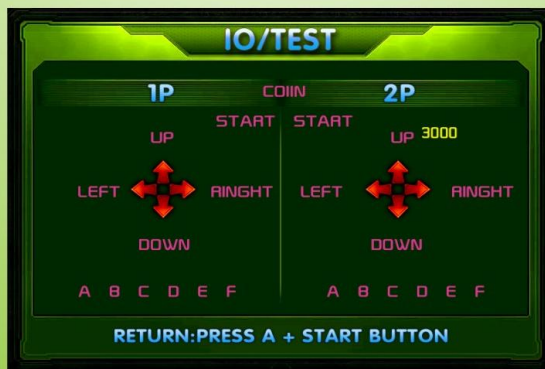

Picture 4



- (1)**IO/TEST**: This option can test the machine's coin selector, joystick, buttons connection pandora's box is correct, test before is purple, after the test for yellow, again press for blue .( Picture 4)
- (2)**CREDIT MODE**: Press A button to select credit mode(1 coin 1 credit/2 coins 1 credit etc)
- (3)**EXIT GAME**: Press A button to select exit game mode. MENU/exit to menu;START+COIN/hold P1 start button and insert coin will exit game.
- (4)**AUTO EXIT**: PressA button to select. AFTER 3 MINUTES/will exit game if no playing over 3 minutes; OFF/this function will be closed.
- (5)**SELECT GAME**: Press A button to select. WITH COIN/can only select game after insert coin; ANY/can select game without insert coin.

#### (6)**BOOK KEEPING**

Game board can record all the number of insert coin, displayed in the sytem Settings at the bottom of the “TOTAL COINS” if you need to clean the total coin records,into the bookkeeping, Then prompt the enter password,The defaultpassword is 55555555, joystickup&down change the number, left&right is next and return. (Picture5) after into can clean coin records and change the password.(Picture6)



Picture 5



Picture 6

Select change password, enter your old password need to confirm(Picture7)  
 , then enter a new password. (Picture8)



Picture 7



Picture 8

## (7)GAME CONFIGURATION: (Picture 9)



Picture 9

### Difficult & Lives

Press A button enter into the difficult & lives setting menu (Picture10). Move the joystick to pick up the game you want to setup, press A button to set the difficults; press B button to set the lifes (can not modify if the game does't have this option); press C button to unified all games' setting same as current game; press D button to exit the setting.



Picture 10

### Display/Hide game

Press B button enter into the display/hide setting menu



(Picture 11). Move the joystick to pick up the game you want to setup, press A button to display/hide; press B button will display all games; press C button will hide all games; press D button exit the setting.



Picture 11

#### (8)SAVE SETTING & RBOOT

Press A button to save the setting.( Picture 12)



Picture 12

#### (9)FACTORY SETTING&RBOOT

Press A button will return to factory setting

The logo for 'Pandora's Box 4 HD' is centered against a background of a blue planet with white clouds. The text 'PANDORA'S' is in a stylized, jagged, yellow-to-orange gradient font. Below it, 'BOX' is in a similar but larger font. To the right of 'BOX' is a large, stylized number '4' in the same gradient, with a jagged, torn-edge effect. Below 'BOX' and to the left of the '4' is the text 'HD' in a red, italicized font with a black outline.

# PANDORA'S BOX HD 4

THANK YOU FOR  
USING OUR PRODUCTS!